





# TORONTO STOCKHOLM

Mounting Instructions Balcony Banister  
Montageanleitung Brüstungsgeländer  
Montagevejledning Brøstningsgelænder

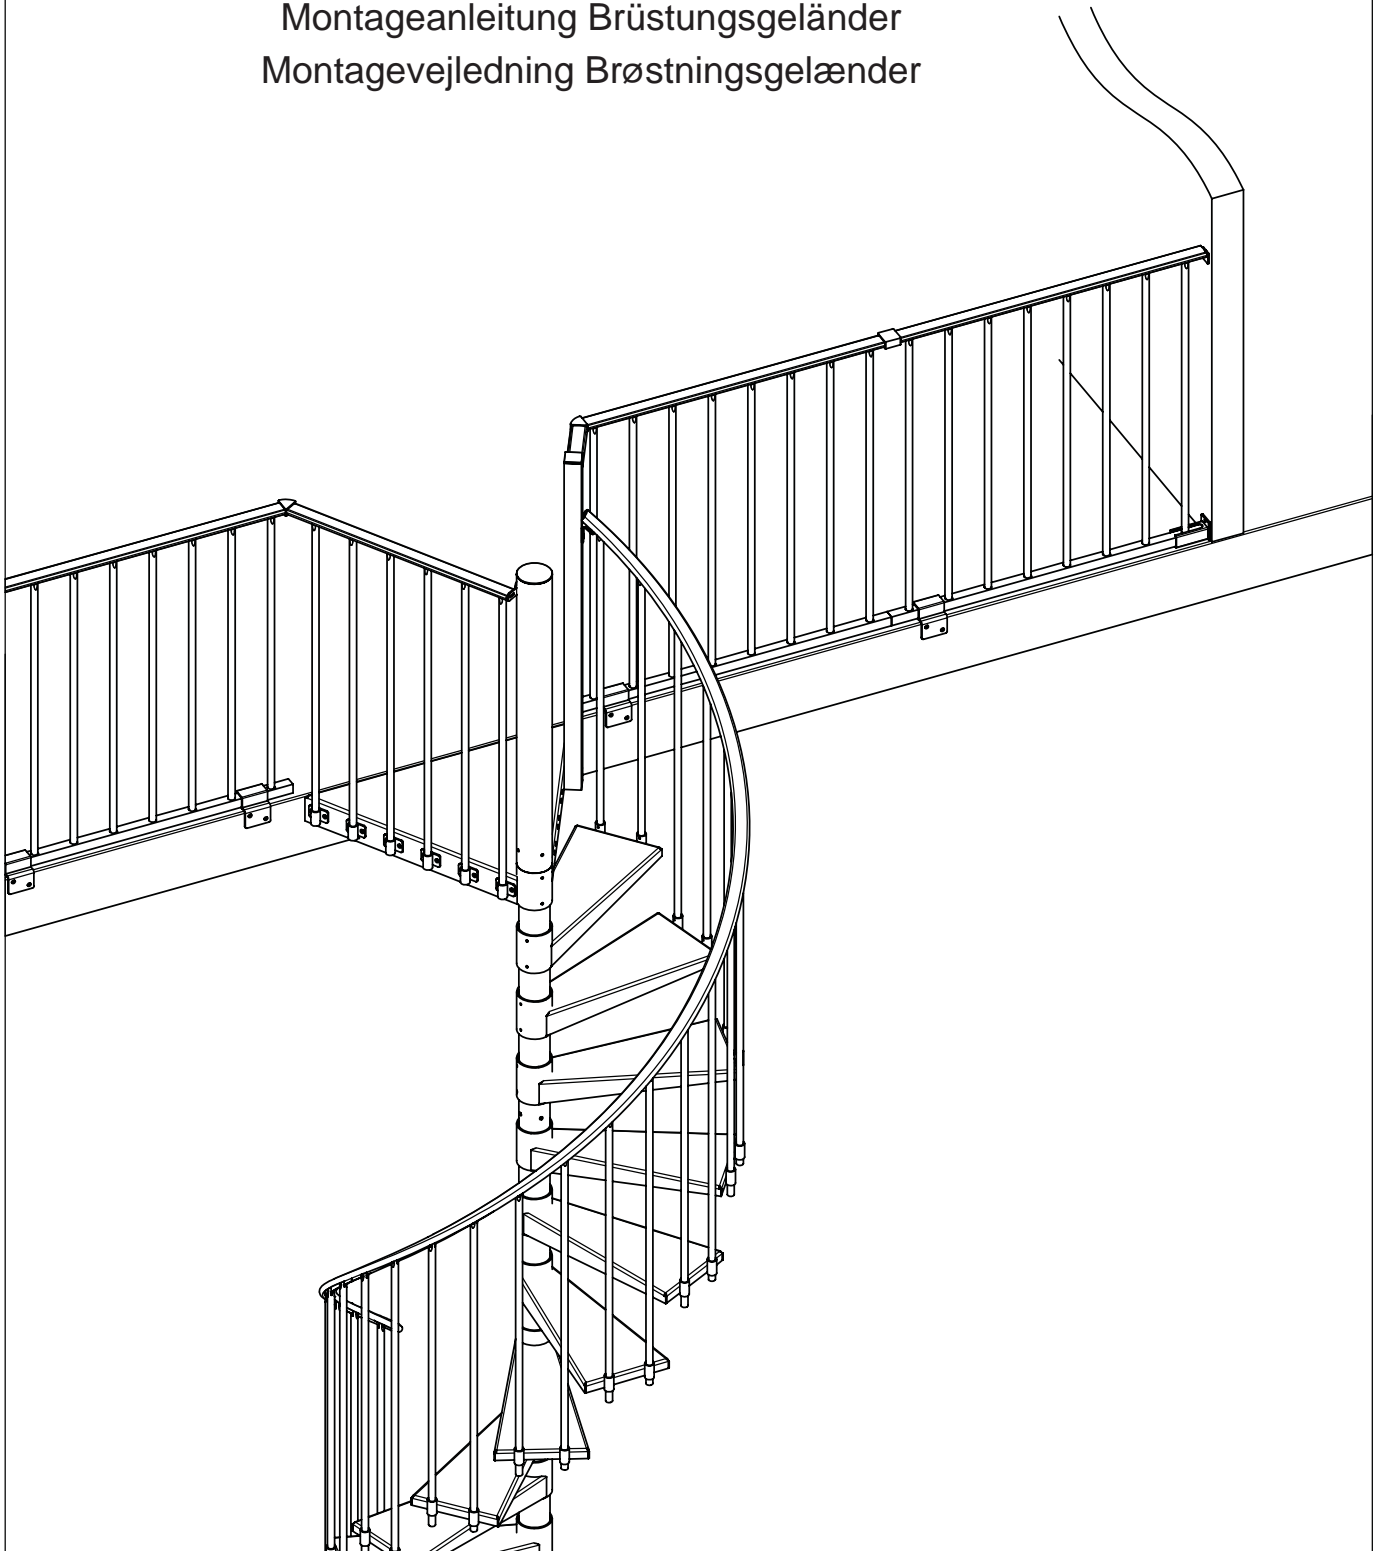




R1-99856 / 31-03-2009

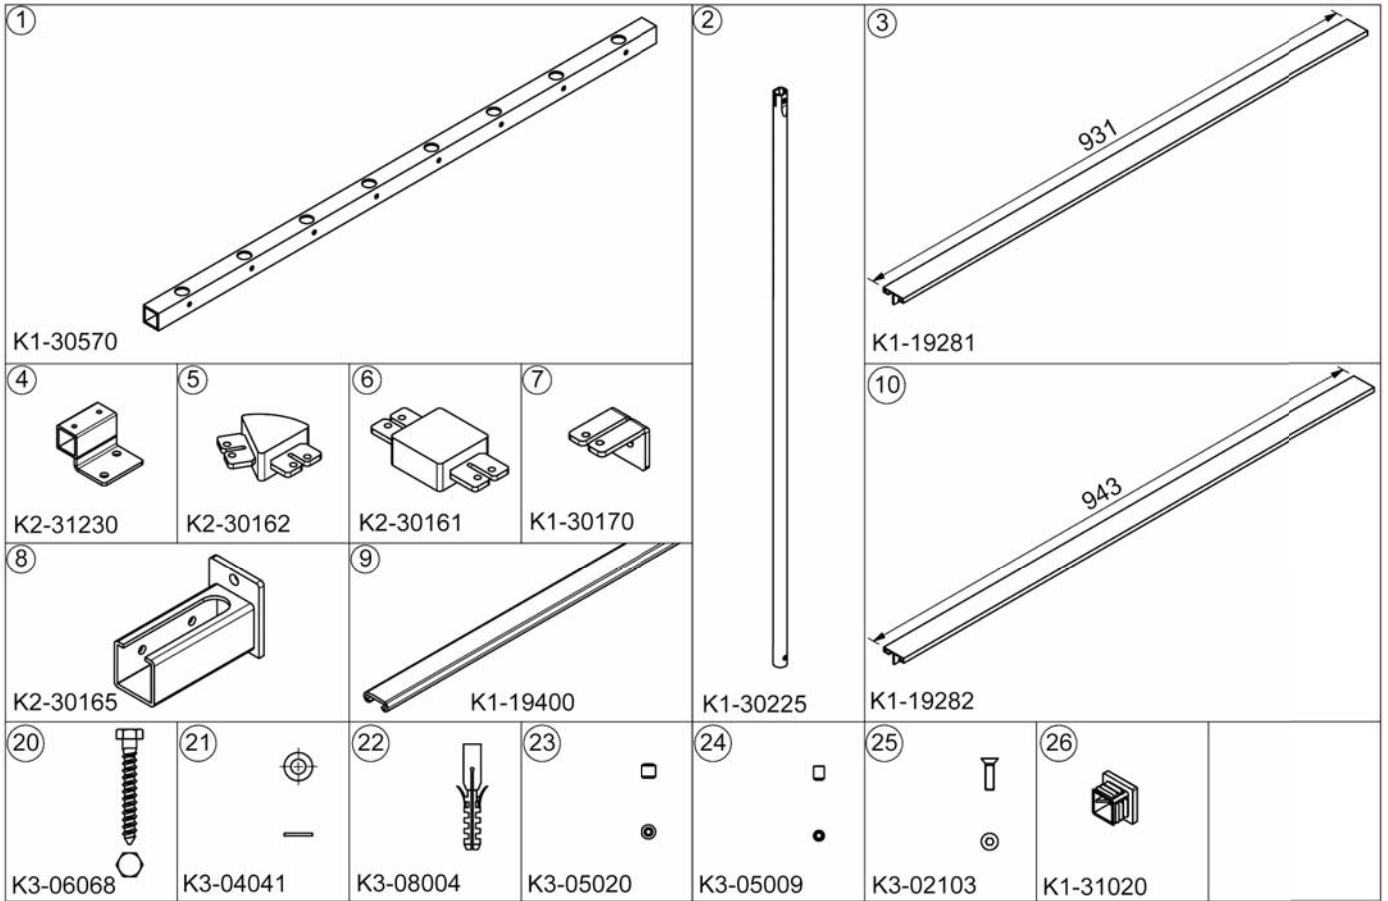


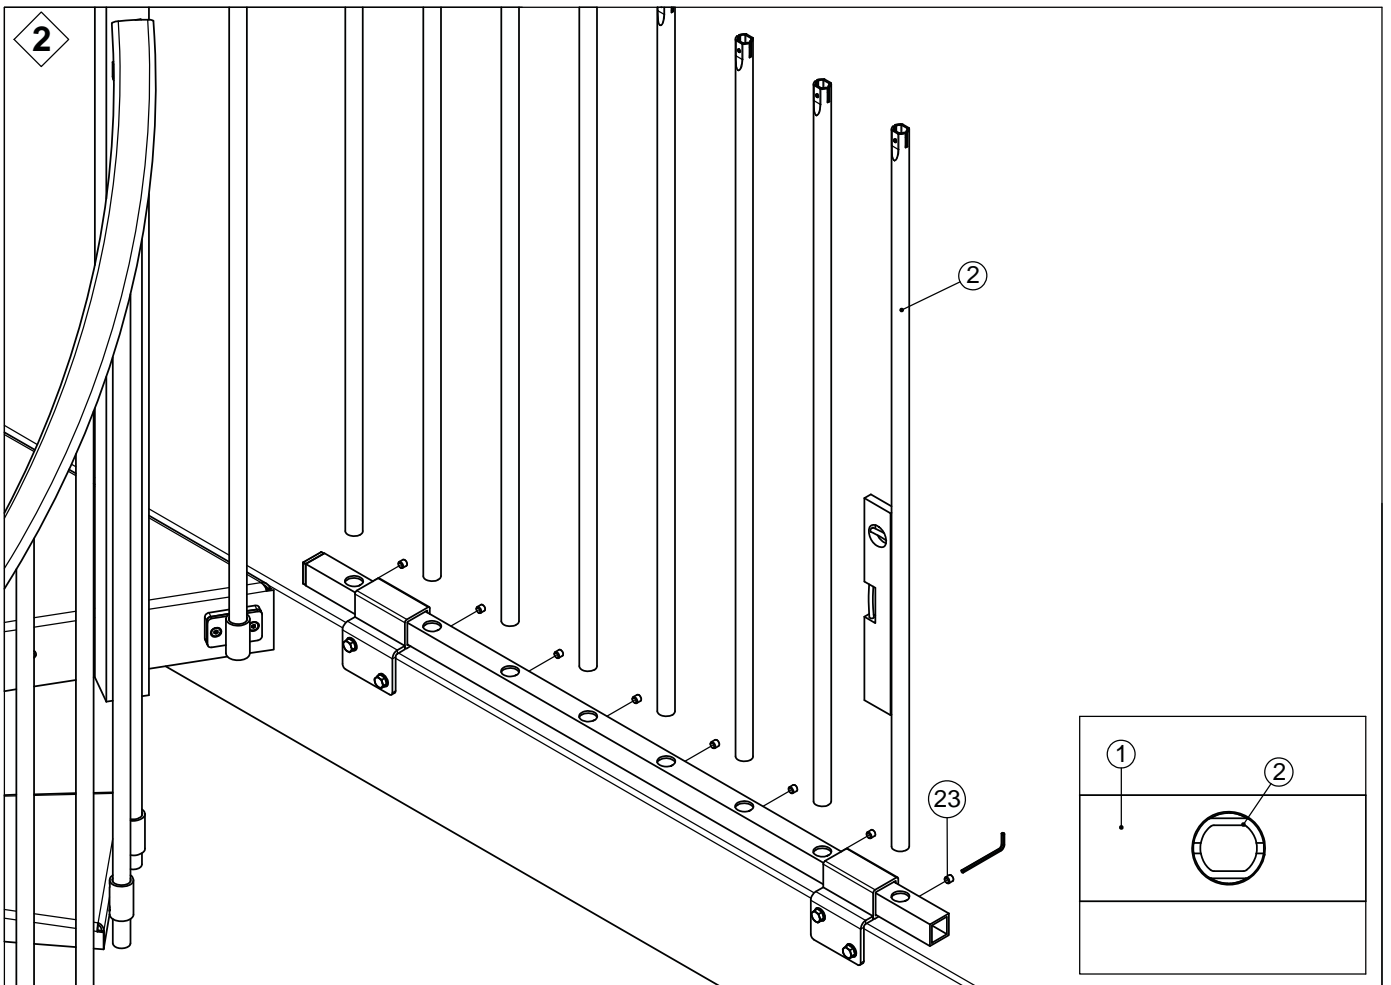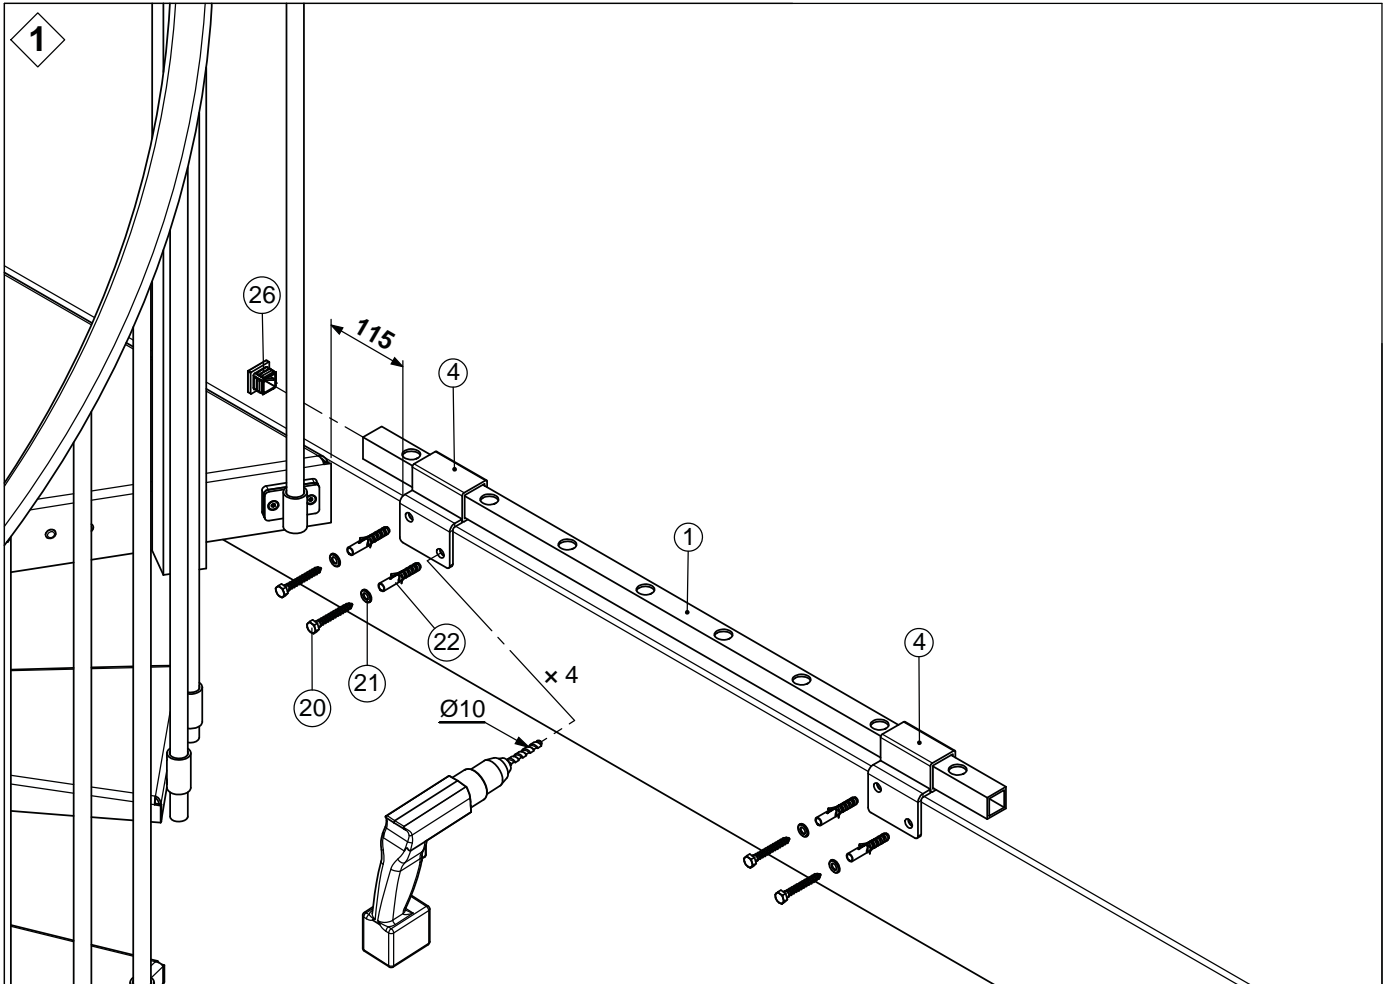

R1-99851-02

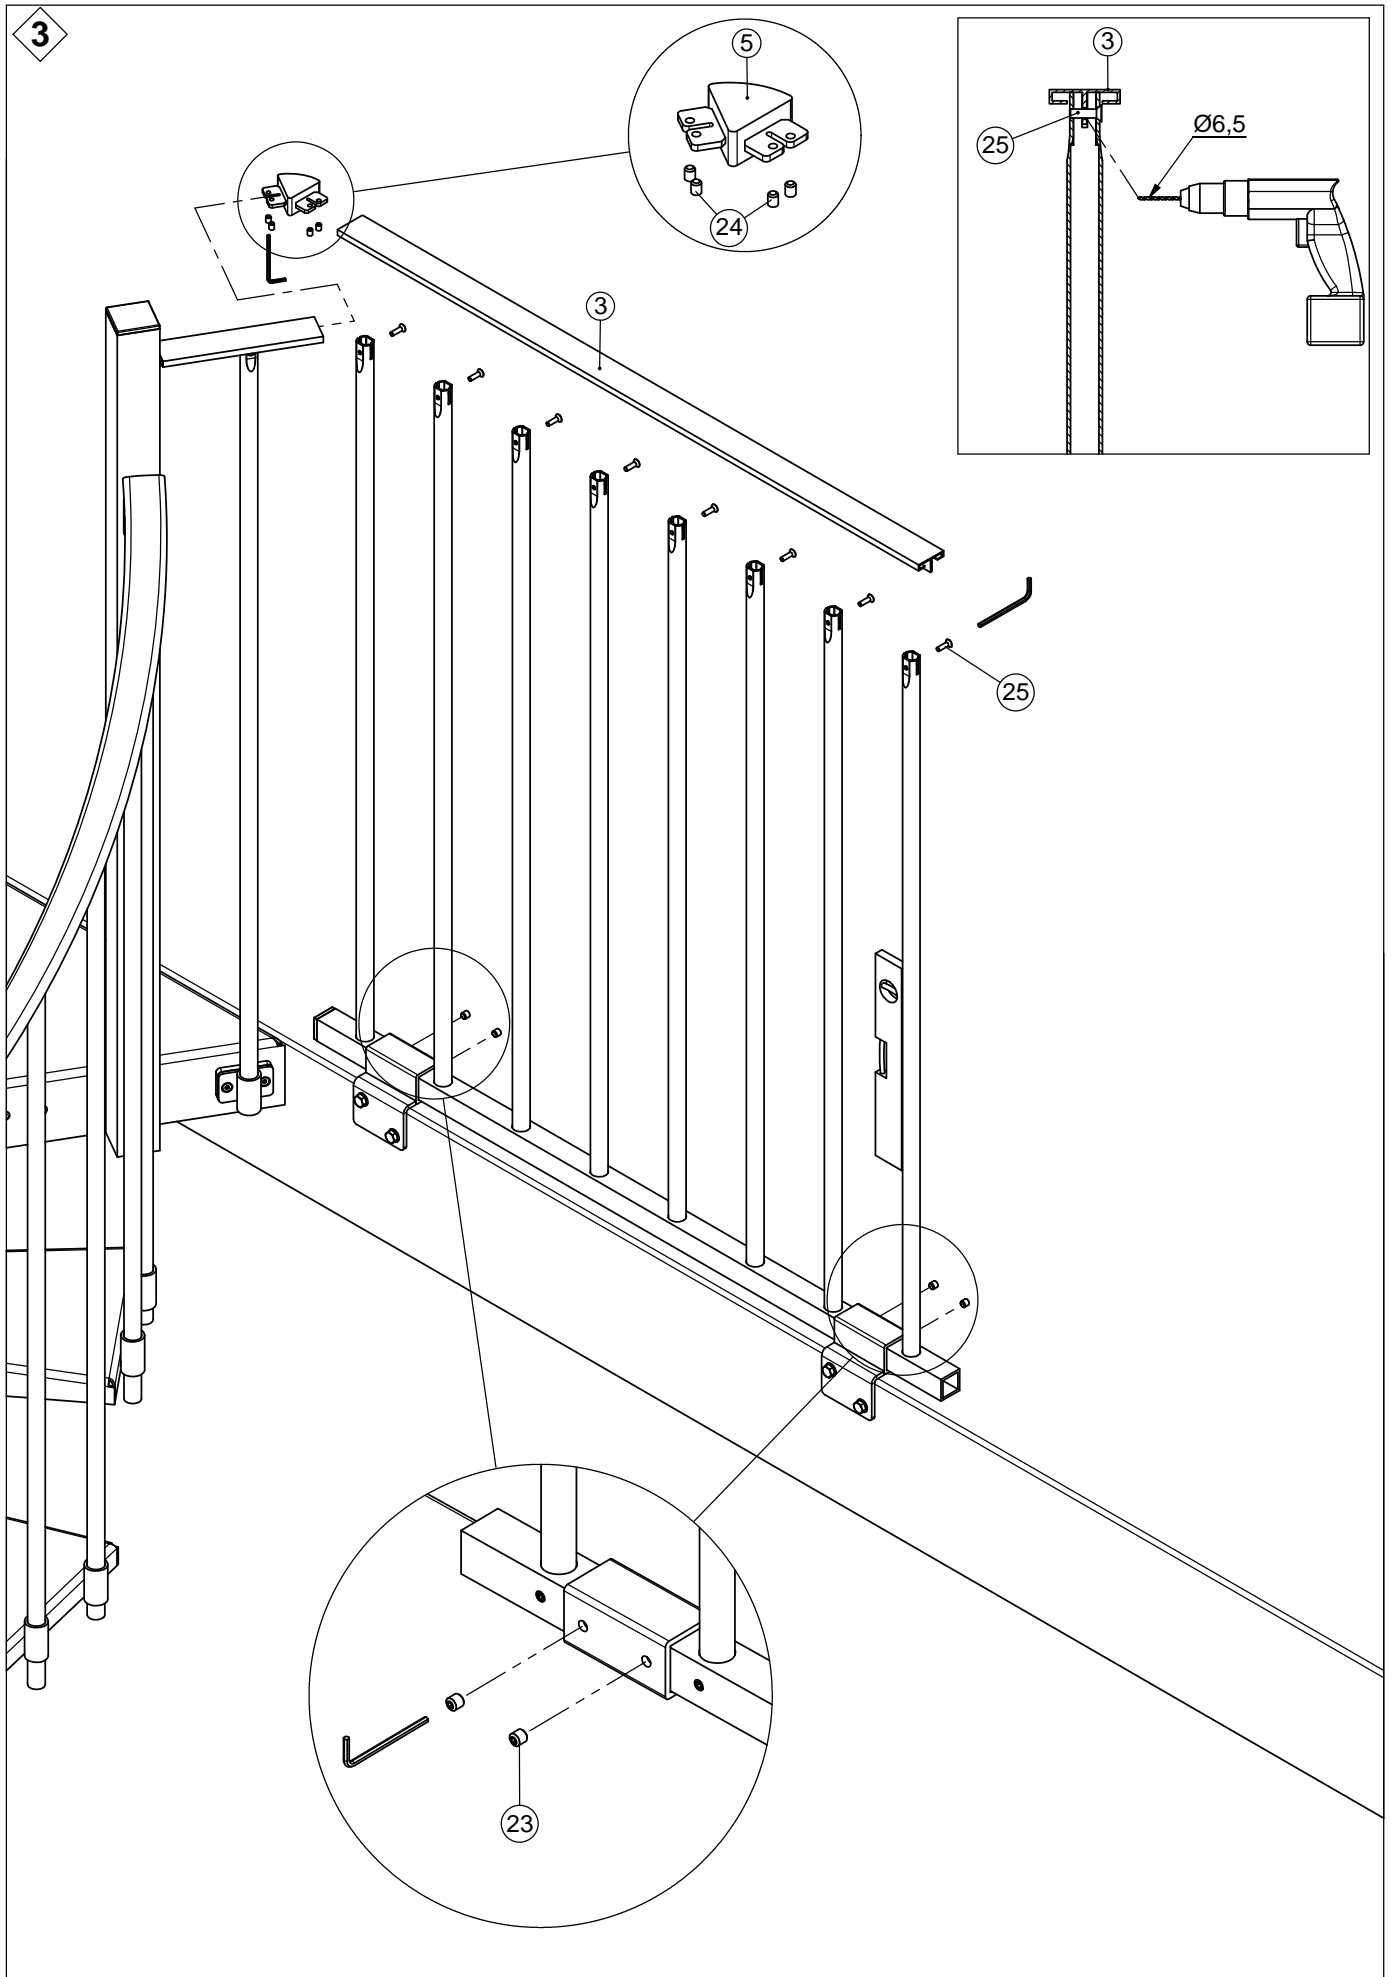

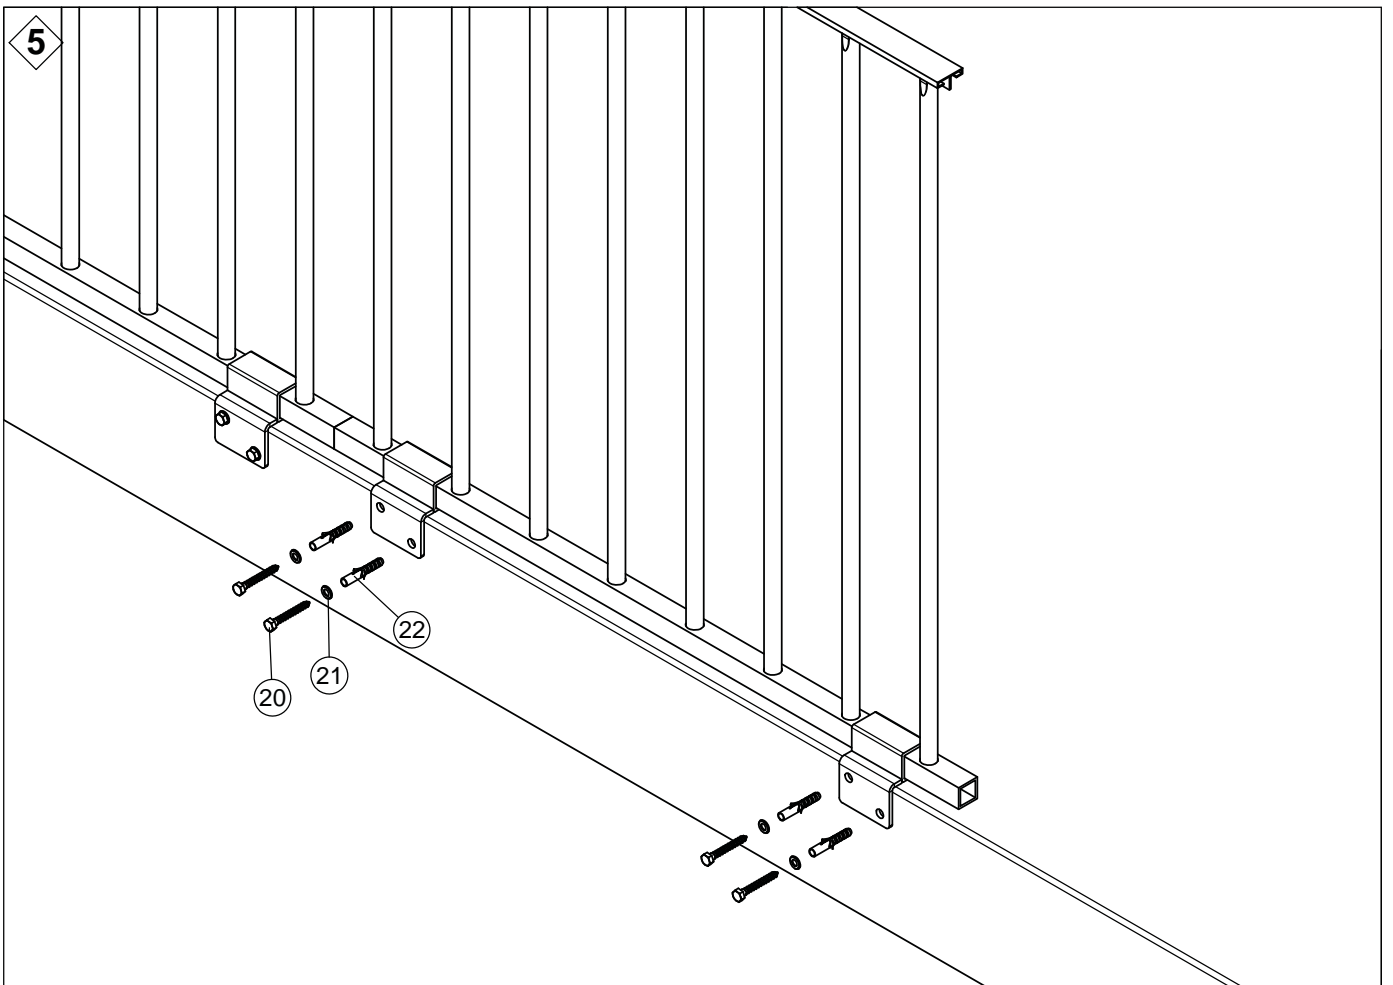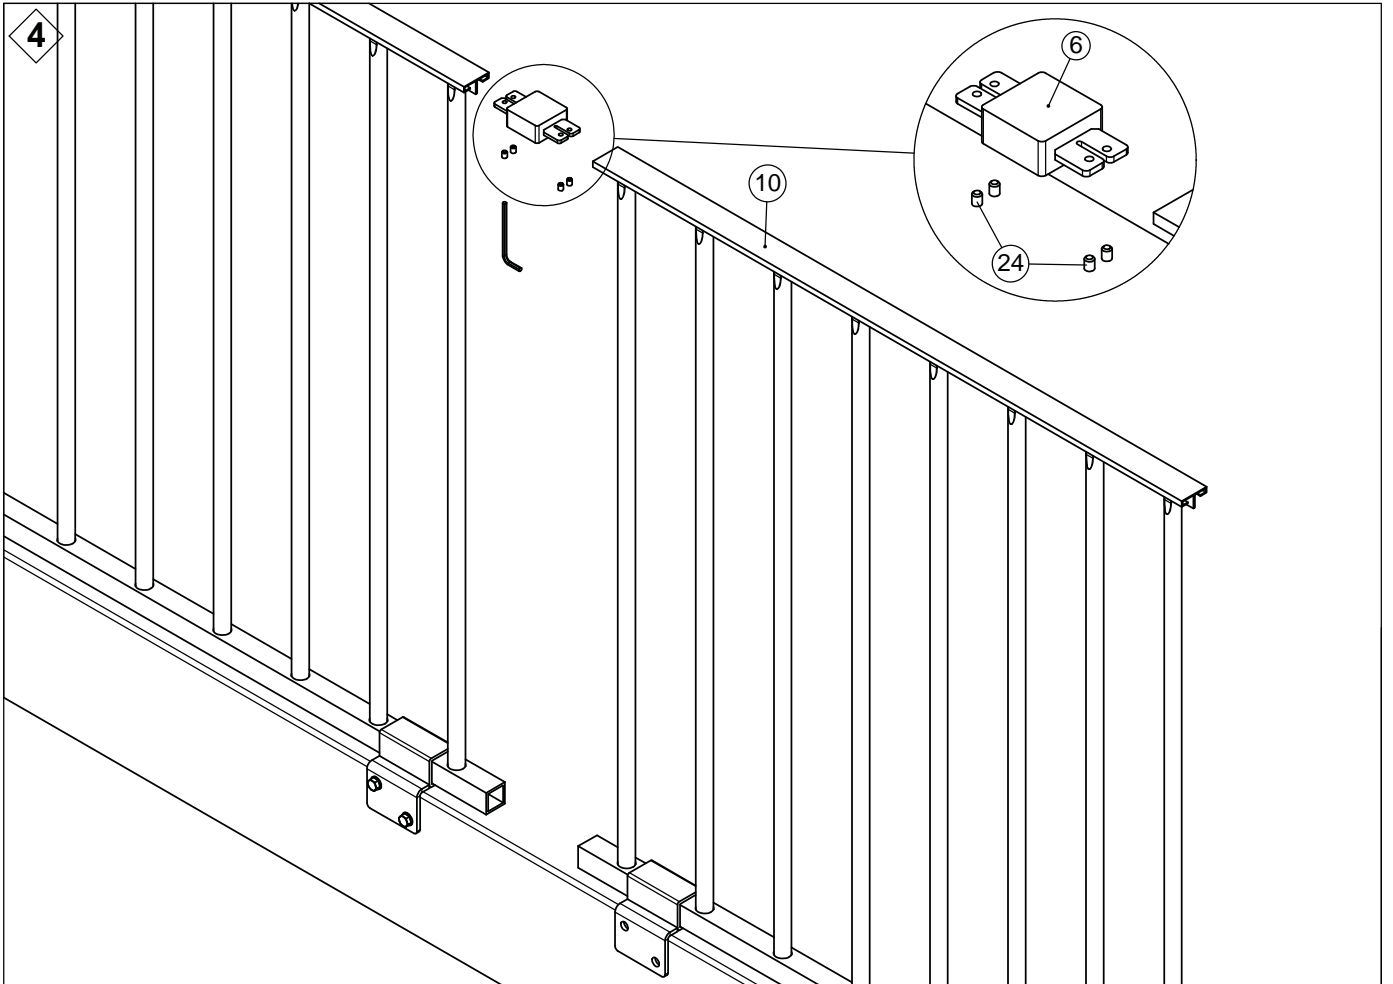

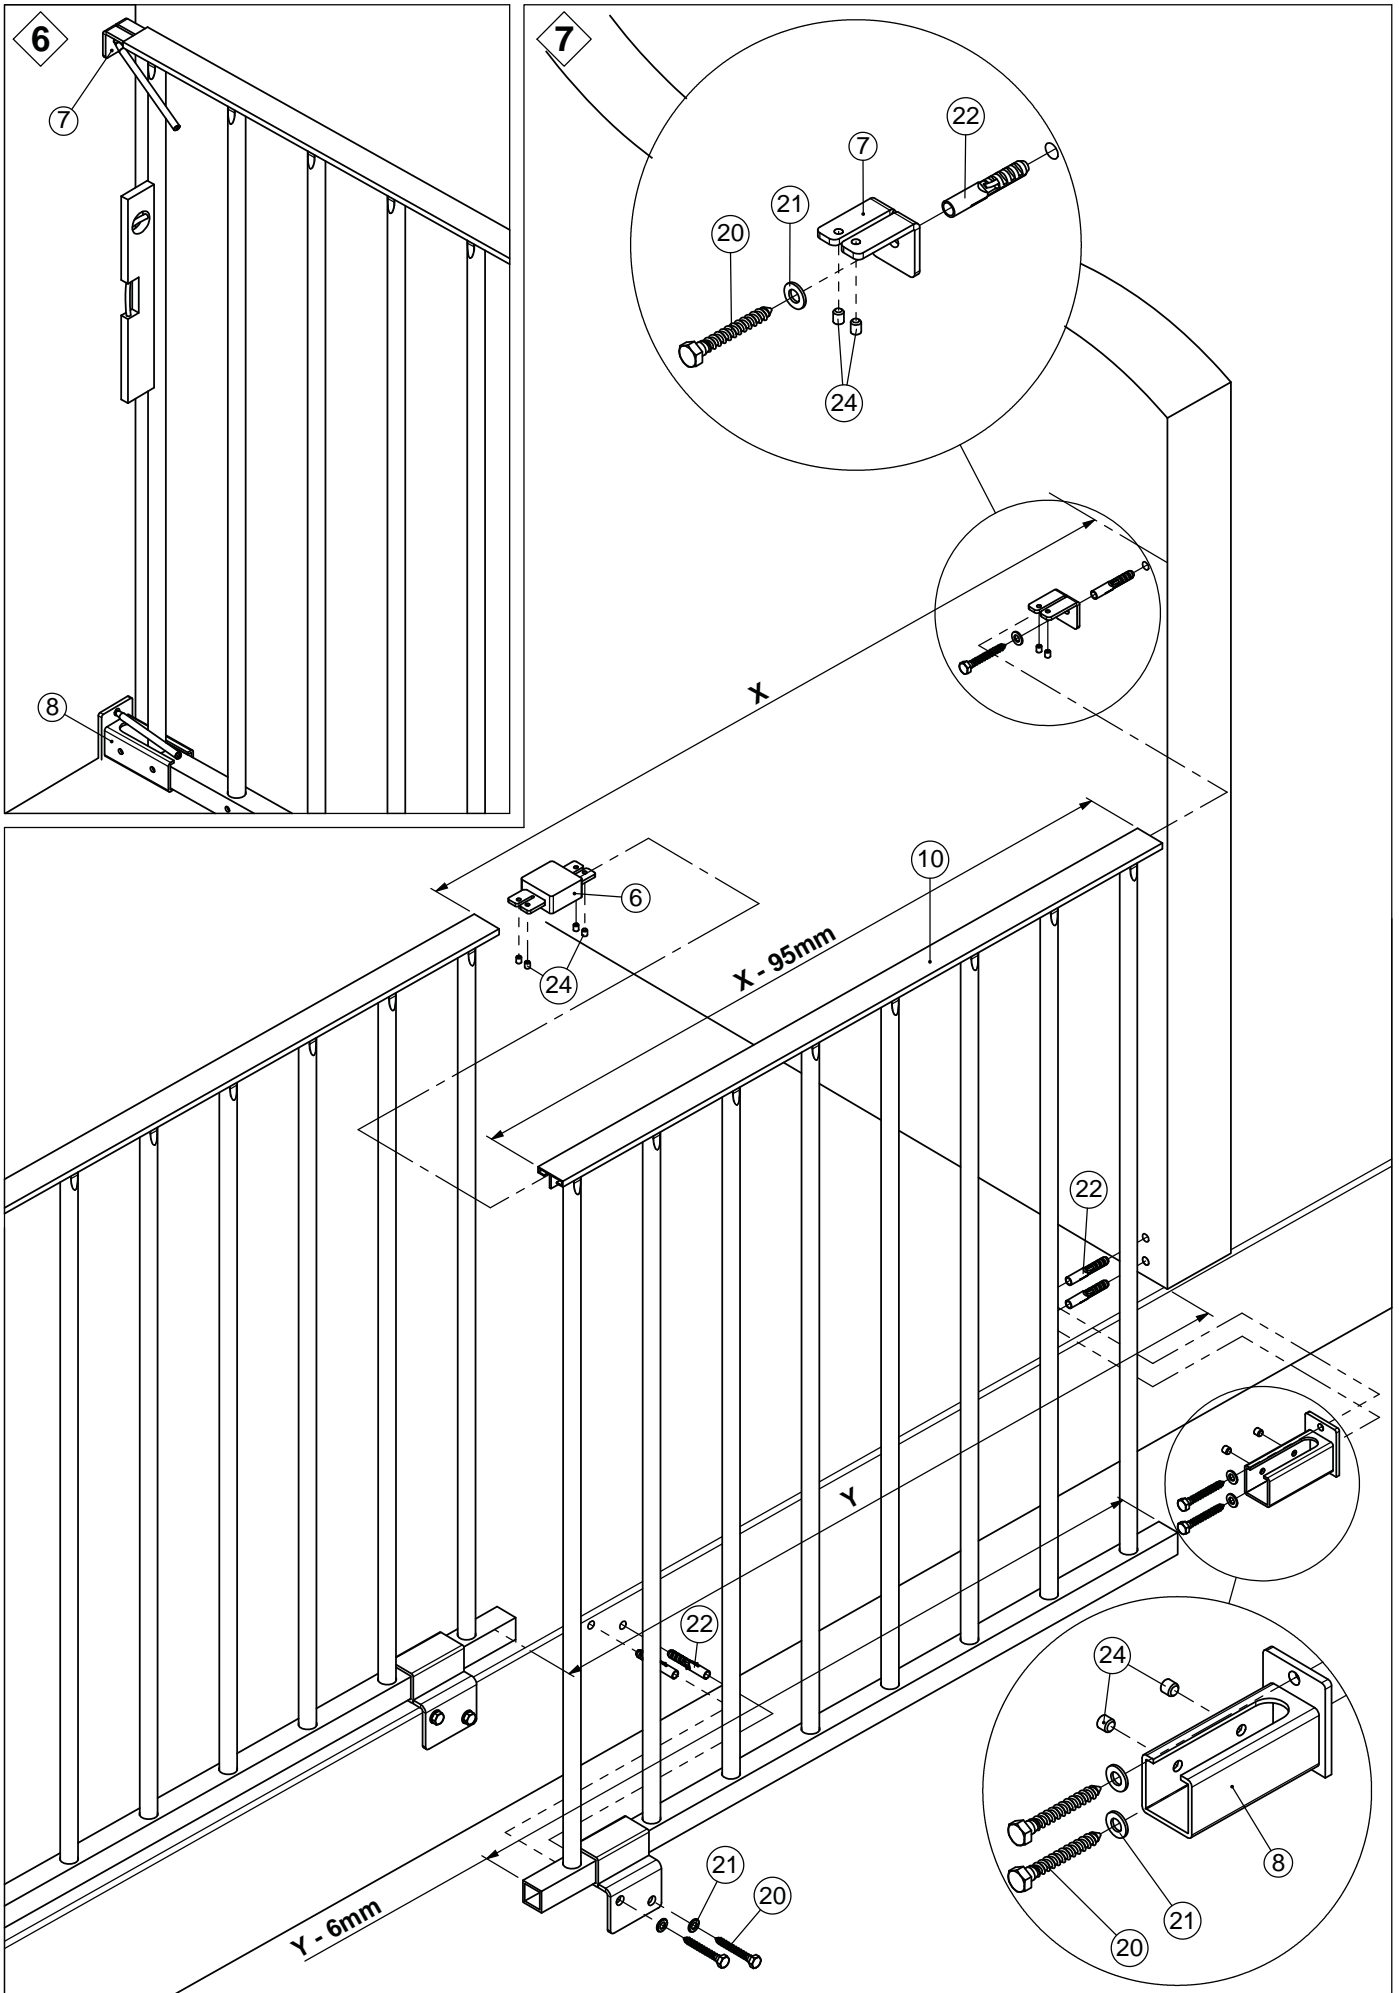

8

